

Besuchen Sie uns im Internet

Visit us on the Internet

Visitez-nous sur Internet

www.baseflex.de

BASEflex[®]

Gebrauchs- und Installationsanleitung


User Instructions and Installation Guide

Mode d'emploi et d'installation

Lieferumfang Scope of delivery Contenu de la livraison

English

First installation of BASEflex

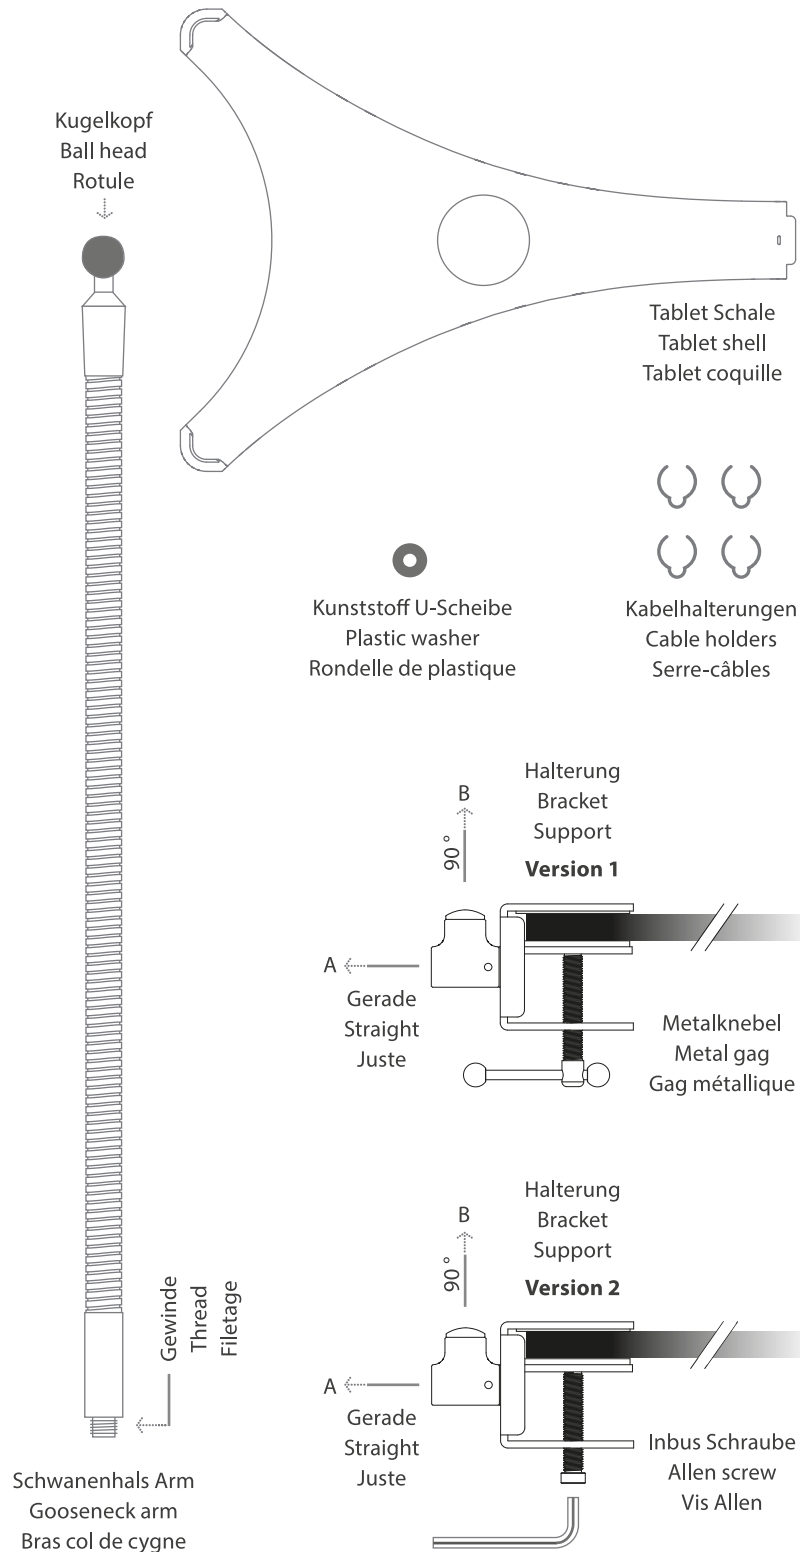

1.) Unless pre-installed, place the plastic washer over the thread of the gooseneck arm and screw the end of the arm to the bracket.

a.) If mounting to a display etc., affix the arm at opening "A" (straight) of the bracket.

b.) If mounting on a desk, table etc., remove the rubber cap from opening "B" (90°) and affix gooseneck arm to opening "B." Subsequently, insert the rubber cap into the free opening "A" (straight).

Tip: If you bend the gooseneck arm into a slight U-shape, it is easier to tighten it in the bracket.

2.) First release the plastic nut from the back of the tablet shell and push it over the arm.

3.) Now push the rear opening of the tablet shell onto the ball head of the arm and leave the tablet shell on the ball head.

4.) Now guide the plastic nut over the arm back to the ball head in the tablet shell and screw the sleeve by hand onto the back of the tablet shell. Please do not use tools, such as pliers etc., in order to prevent damage to the BASEflex.

Tip: Now adjust the position of the tablet shell as required.

5.) Now affix the holders together with the attached gooseneck arm and the tablet shell to your display, desk, table surface etc. with a maximum material thickness of 4 cm. Depending of the version, screw the holder sufficiently tight with the metal gag (Version 1) or the supplied Allen key (Version 2).

6.) Now insert your tablet into the tablet shell and carefully press until the device noticeably and audibly clicks into the tablet shell.

7.) If desired, use the supplied 4 cable holders to secure the charger cable / data cable along the gooseneck.

8.) You made it ... Now position your tablet device for use as a secondary display, touch screen display, solo monitor, TV or Video display or whatever else you can imagine.

Further tips and tricks:

- When attaching it to your display we recommend to install the bracket lower than the intended final tablet position allowing the angle to provide a greater load capacity for your tablet.

- It is easier if you make the final adjustment of the tablet shell and the gooseneck arm before you place your device in the tablet shell.

- Minor adjustments or adaptations may be necessary to bring the BASEflex with your tablet to the ideal position; however, once this is done, the position of your tablet will not change.